


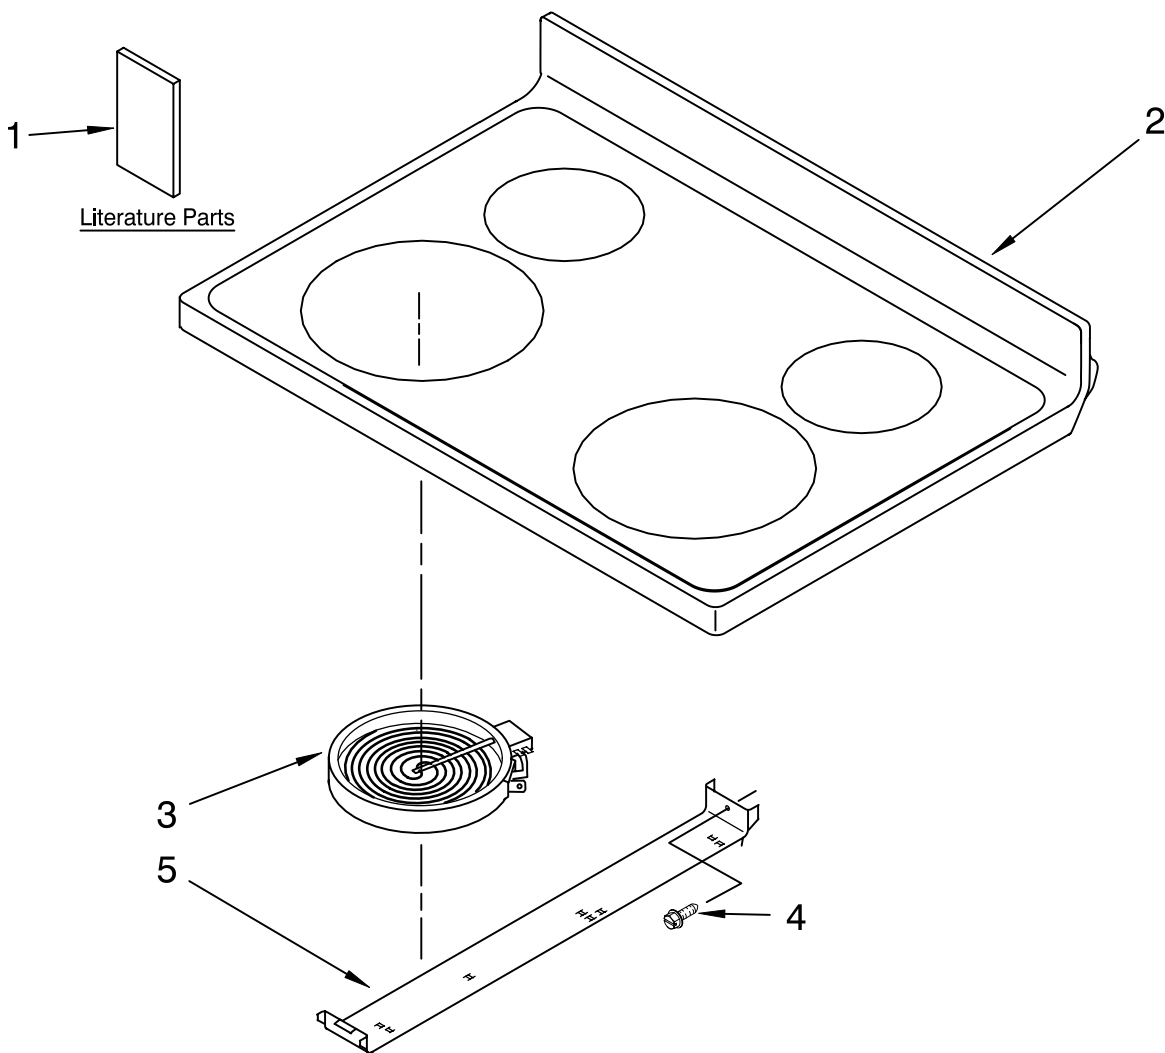

# COOKTOP PARTS

For Models: RF262LXSW1, RF262LXSQ1, RF262LXST1, RF262LXSB1  
(White) (Designer White)(Designer Biscuit) (Black)

30" ELECTRIC FREESTANDING  
SELF CLEAN RANGE



Illus. No.	Part No.	DESCRIPTION
1	9762996	Literature Instructions Installations Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9763001	Owners Manual
	9762972	Tech Sheet
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	9763324	Cooktop White
	9763325	Biscuit
	9763326	Black

Illus. No.	Part No.	DESCRIPTION
3	8273992	Element, Surface 2500 W – LF/RF
	8273994	1200 W – LR/RR
4	3196169	Screw
5	8272791	Bracket, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: RF262LXSW1, RF262LXSQ1, RF262LXST1, RF262LXSB1  
(White) (Designer White)(Designer Biscuit) (Black)

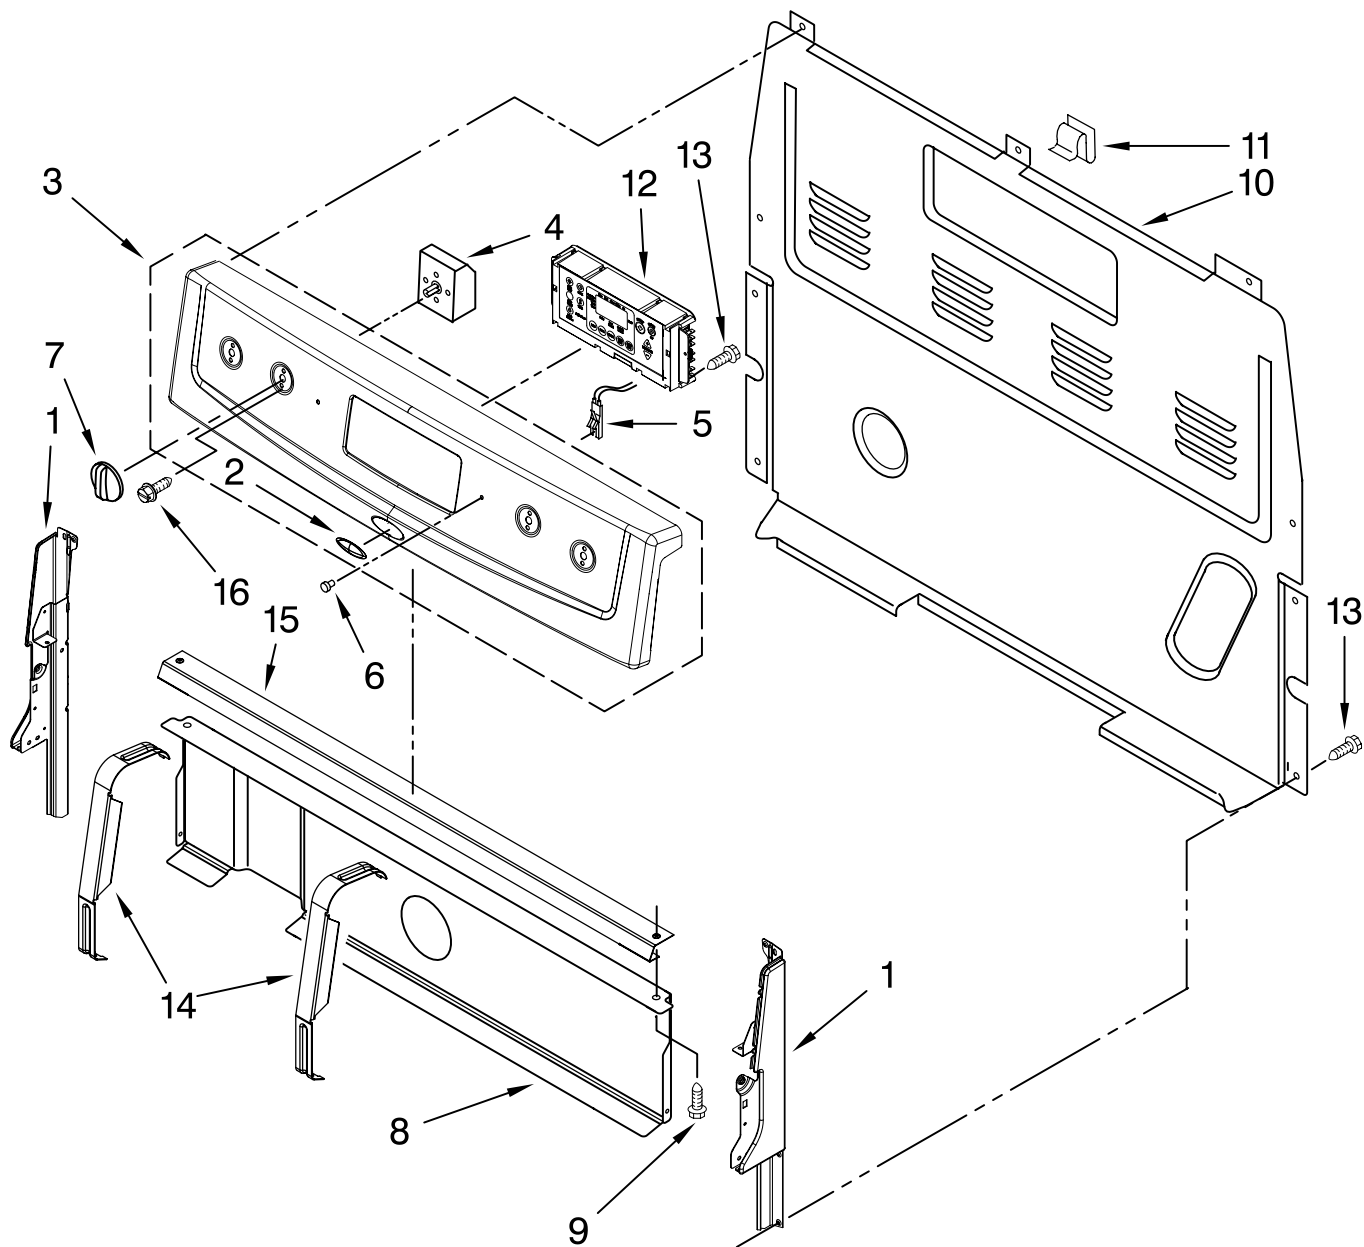

Illus. No.	Part No.	DESCRIPTION
1	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
	W10009080	Black Left Hand
	W10009090	Black Right Hand
2	9757609	Nameplate
3		Panel, Control
	9762018	White
	9762028	Biscuit
	9762029	Black


Illus. No.	Part No.	DESCRIPTION
4	3148954	Switch, Infinite LF/RF (Orange)
	3148951	LR/RR (Silver)
5	8523265	Light, Indicator
6	3196068	Surface Unit (2)
7		Lens, Light (3)
	9761962	Knob, Infinite (4)
	9761962	White
	9761963	Biscuit
	9761964	Black
8	8523280	Shield, Heat

Illus. No.	Part No.	DESCRIPTION
9	3196166	Screw White
	8281194	Biscuit
	3196168	Black
10	8272473	Cover, Upper
11	8273564	Clip
12		Control, Range
	W10114370	White
	W10114372	Biscuit
	W10114371	Black
13	3196178	Screw
14	9762078	Brkt-Mntg., EOC
15	9762095	Brkt-Mntg., Console
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF262LXSW1, RF262LXSQ1, RF262LXST1, RF262LXSB1  
(White) (Designer White)(Designer Biscuit) (Black)

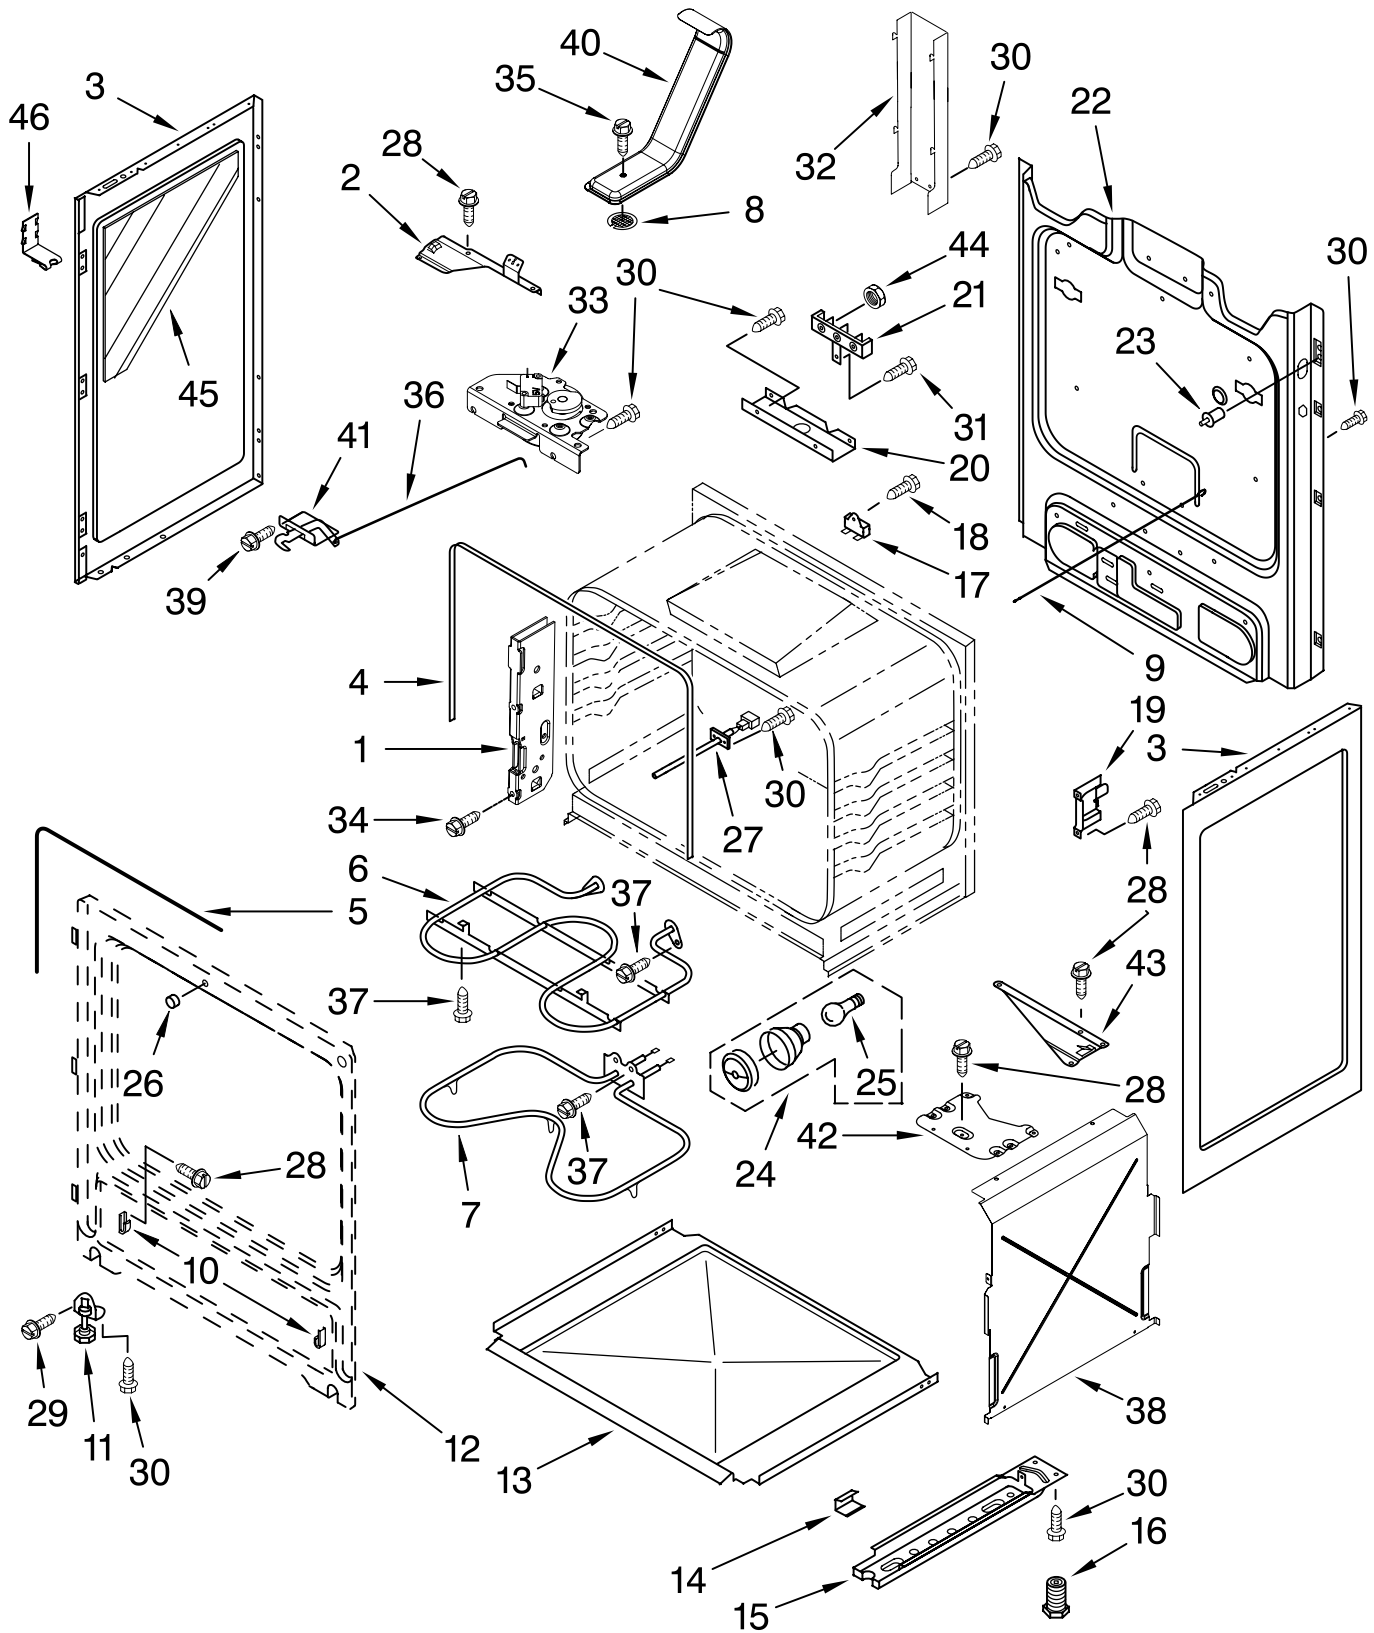

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF262LXSW1, RF262LXSQ1, RF262LXST1, RF262LXSB1  
(White) (Designer White)(Designer Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt – Mounting
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White
	8272519	Biscuit
	8053832	Black
4	W10010350	Seal, Oven Flange
5	8522416	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	9761301	Screen–Catalyst
9	9757239	Rod – Dr Switch
10	9759785	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12		Frame, Front (Not Serviced)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	9761935	Foot, Rear (2)
17	3196548	Thermal, Fuse
18	3196172	Screw
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9758701	Spacer – Door
27	8273902	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	9758283	Cover, Box
33	W10107820	Latch Asy, Rear
34	W10031780	Screw
35	3196566	Screw
36	W10078380	Rod, Latch
37	3196174	Screw
38	9758238	Retainer, Insul(2)
39	3196560	Screw (2)
40	9761300	Flue
41	9761013	Latch, Door
42	3195736	Support, Front (2)
43	3195987	Support, Corner RR
44	112432	Nut
45	9761490	Insulation, Foil
46	9761512	Clip, Mounting


## INSULATION

8272616 Insulation, Wrap  
8272612 Insulation, Back  
8272613 Insulation, Vent

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DRAWER & BROILER PARTS

For Models: RF262LXSW1, RF262LXSQ1, RF262LXST1, RF262LXSB1  
(White) (Designer White)(Designer Biscuit) (Black)

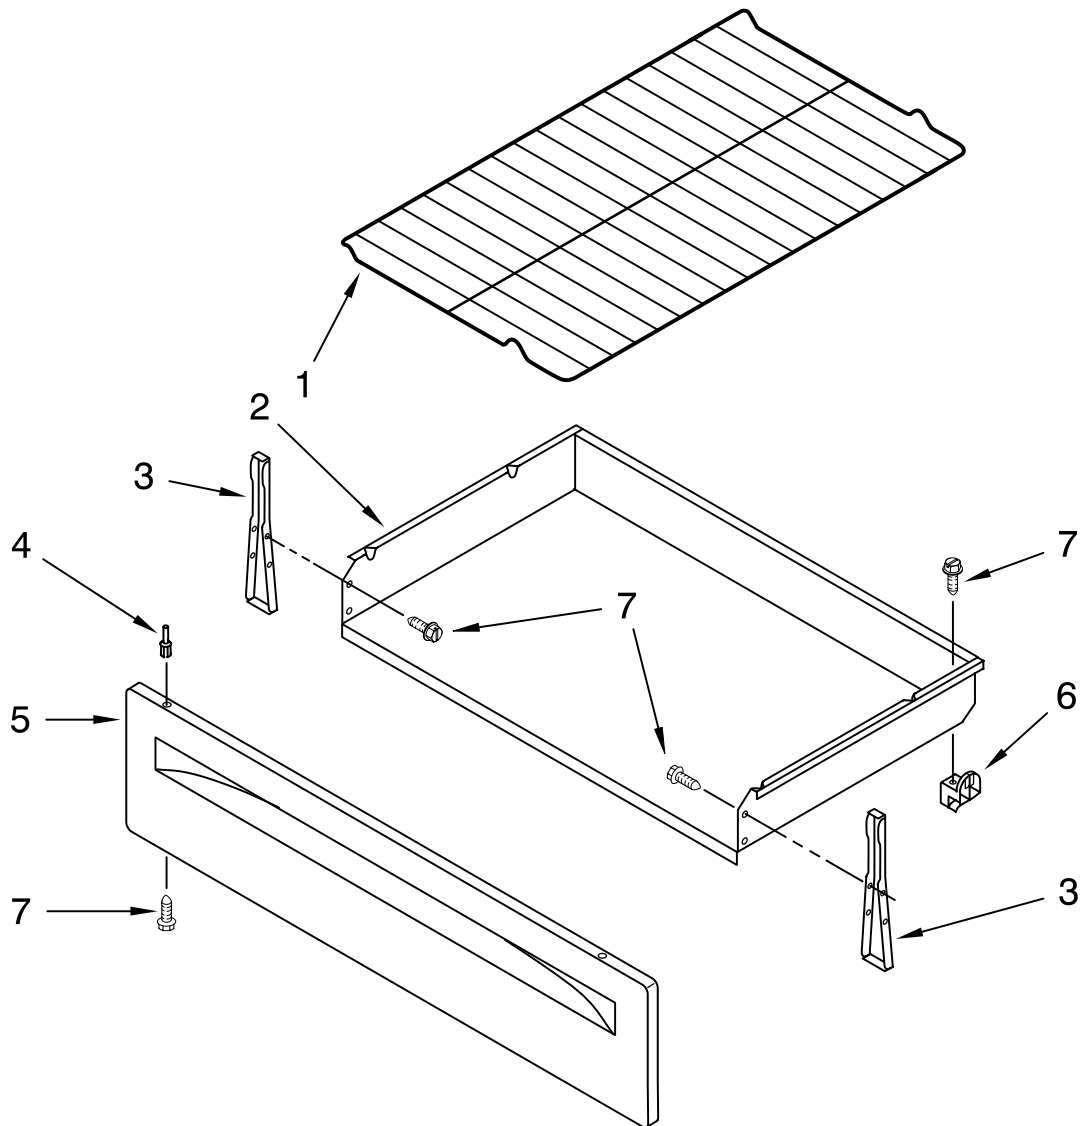


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	9761030	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196813	Black
	3196814	White
	3196815	Almond
5		Panel, Drawer Frnt
	8053341	Black
	8053339	White
	8272501	Biscuit
6	8053334	Glide, Drawer (2)
7	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: RF262LXSW1, RF262LXSQ1, RF262LXST1, RF262LXSB1  
(White) (Designer White)(Designer Biscuit) (Black)

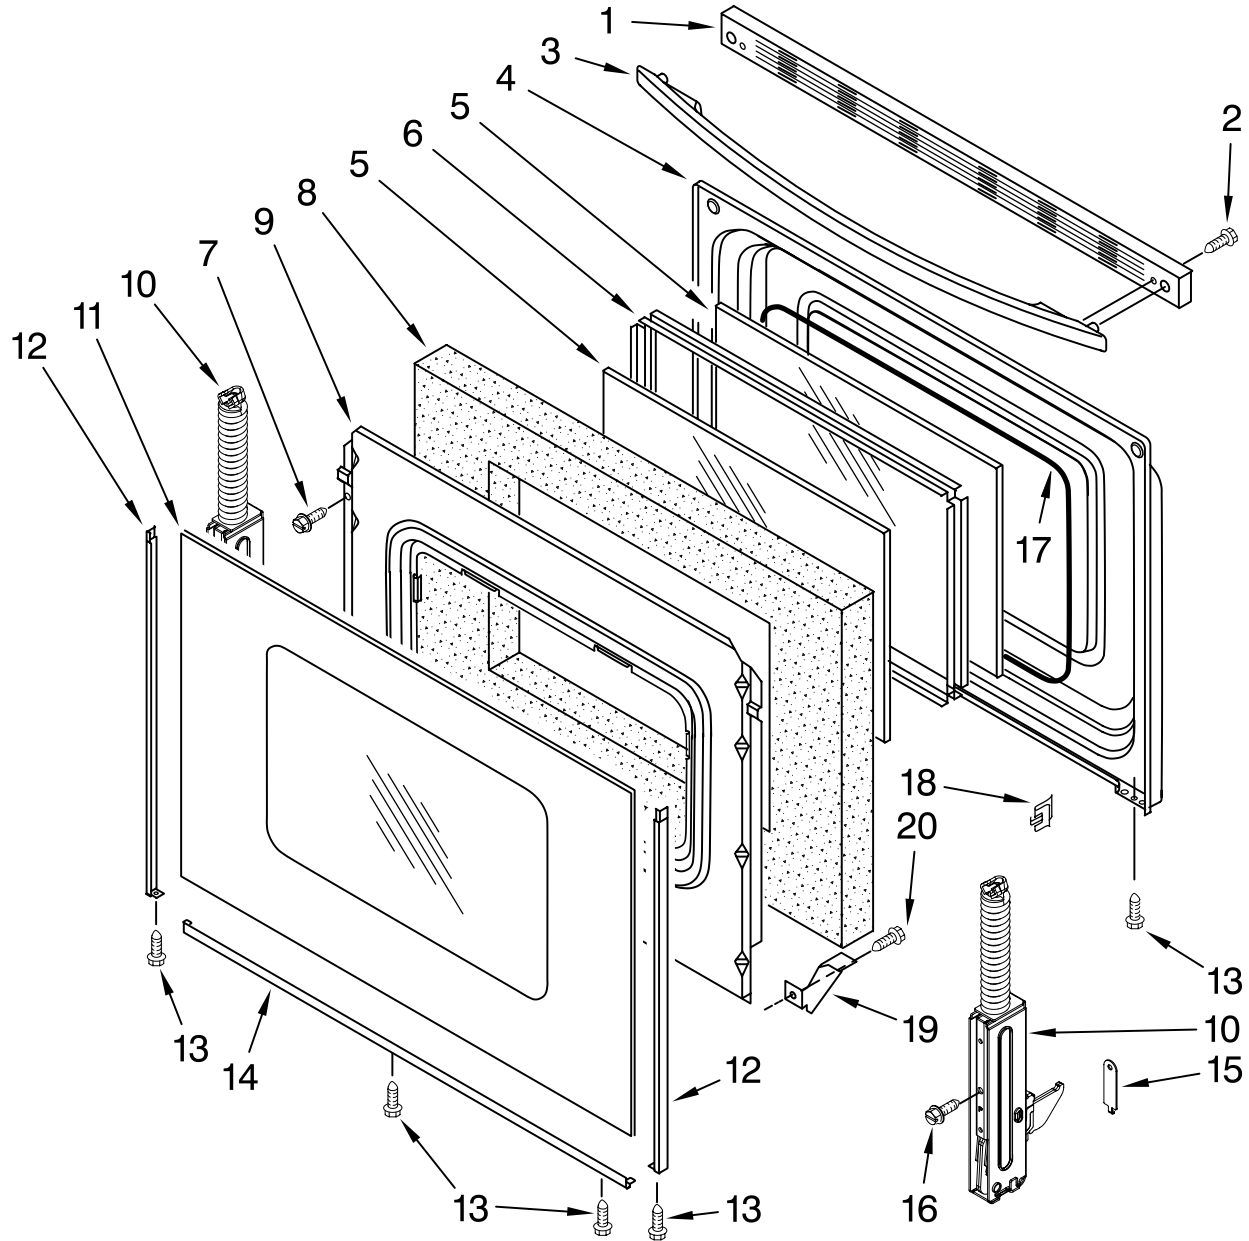

Illus. No.	Part No.	DESCRIPTION
1	9762391	Trim, Top
	9761975	Black
	9761976	White
	9761976	Biscuit
2	3196164	Screw
3	9761983	Handle, Door
	9761982	Black
	9761982	White
	9761984	Biscuit
4	9761344	Liner, Door
5	9758162	Glass, Inner (2)
6	3186289	Frame, Glass
7	W10031790	Screw

Illus. No.	Part No.	DESCRIPTION
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761493	Hinge, Door
11	W10075990	Glass, Outer Door
	W10075980	Black
	W10075980	White
	W10076000	Biscuit
12	8523171	Trim, Door Side
	8523165	Black L.H.
	8523165	Black R.H.
	8523172	White L.H.
	8523166	White R.H.
	8523173	Biscuit L.H.
	8523167	Biscuit R.H.

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
14	8523177	Trim, Lower Door
	8523175	Black
	8523178	White
	8523178	Biscuit
15	9761517	Clip, Door Mntg(2)
16	W10031780	Screw
17	8522414	Seal, Window
18	3196025	Clip, Glass (6)
19	3196794	Bracket, Window(2)
20	3196165	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Models: RF262LXSW1, RF262LXSQ1, RF262LXST1, RF262LXSB1  
(White) (Designer White)(Designer Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

## SPLICING WIRES---25FT.

### LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

## REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

## PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

## PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass
4396923	Pan, Broiler

## ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

## WIRING HARNESS PARTS

W10114915	Harness, Wire (Cooktop Left)
W10114894	Harness, Wire (Cooktop Right)
9762428	Harness, Wire (Sensor/Dr Switch)
8523279	Wire, Ground
3196154	Screw
9762953	Harness, Wire (Main)
313660	Clip, Wire Ground
3196173	Screw
8524132	Shield, Wiring
3196174	Screw (Grnd Wire / Back)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST